TOSHIBA

OWNER'S MANUAL

Color Television

COLOR STREAM™

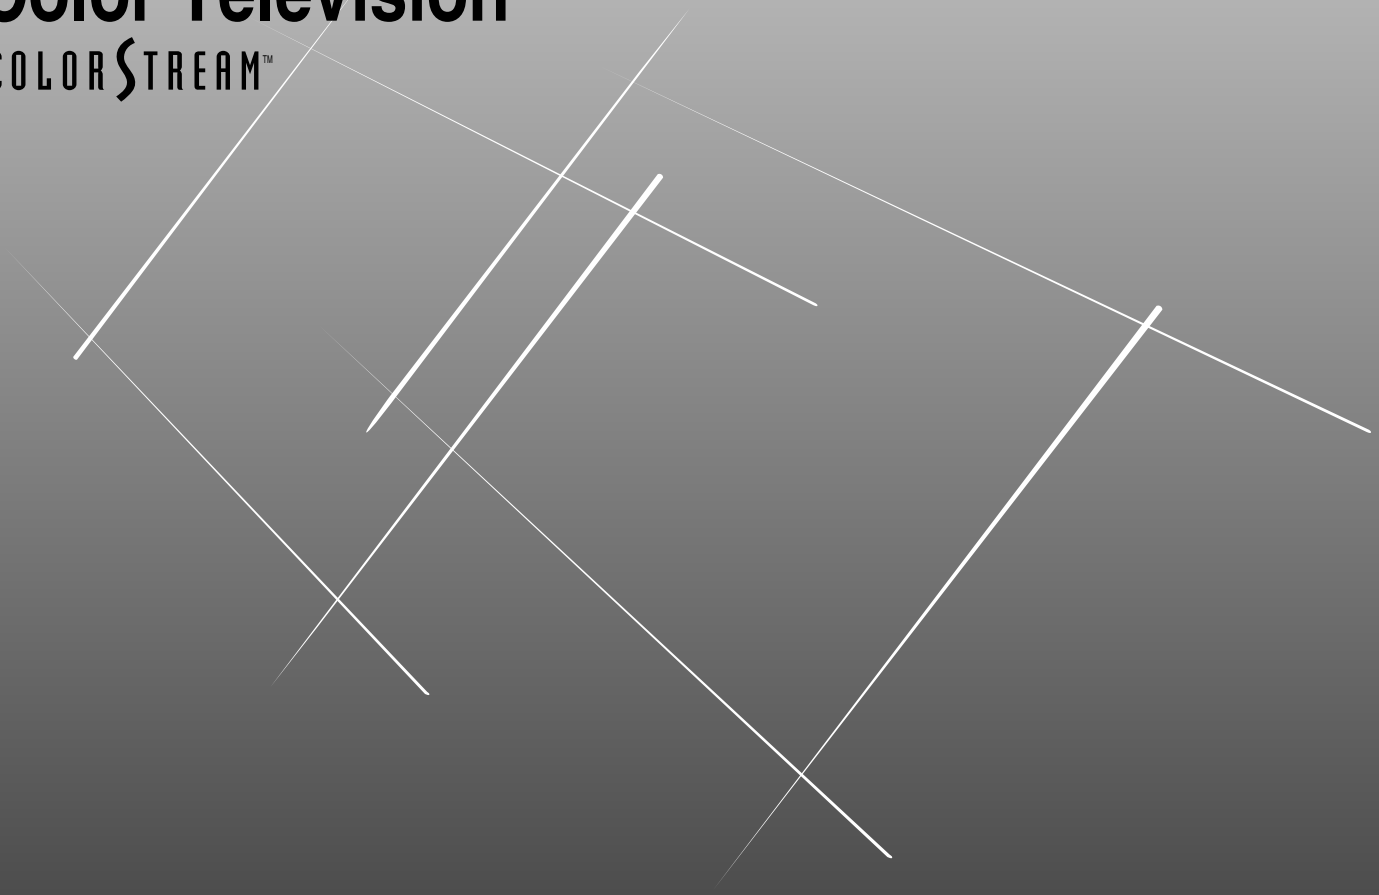

27A40
32A40
36A40

© TOSHIBA CORPORATION, 2000

Dear Customer

Congratulations! You have purchased one of the finest Color TV's on the market!
This manual will help you use the many exciting and useful features to make your TV viewing more enjoyable than ever before.
Before operating your TV set, please read all these safety and operating instructions completely and then retain for future reference.

Customer's Record

You will find the model number and serial number on the back of your TV set.
Record these numbers in the spaces provided below.
Refer to them whenever you call upon your TOSHIBA dealer regarding this product.

Model Number

Serial Number

Safety Precautions

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

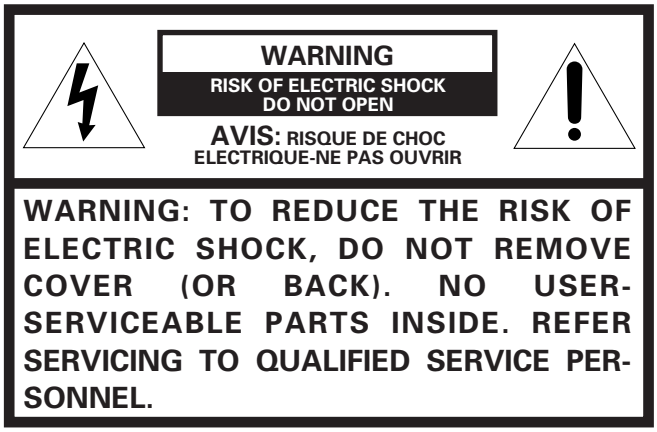
WARNING
RISK OF ELECTRIC SHOCK
DO NOT OPEN
AVIS: RISQUE DE CHOC
ELECTRIQUE-NE PAS OUVRIR
WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

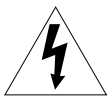

The lightning symbol in the triangle tells you that the voltage inside this product may be strong enough to cause an electric shock.
DO NOT TRY TO SERVICE THIS PRODUCT YOURSELF.

The exclamation point in the triangle tells you that important operating and maintenance instructions follow this symbol.

This TV set may be used only with TOSHIBA stand shown on page 33. Use with other stands may result in instability causing possible injury.

CAUTIONS:
TO PREVENT ELECTRIC SHOCK, DO NOT USE THIS POLARIZED PLUG WITH AN EXTENSION CORD RECEPTACLE OR OTHER OUTLET UNLESS THE PRONGS CAN BE FULLY INSERTED INTO THE OUTLET TO PREVENT ANY EXPOSURE OF THE PRONGS ON THE POLARIZED PLUG.

ATTENTION:
POUR PRÉVENIR LES CHOCS ÉLECTRIQUES, NE PAS UTILISER CETTE FICHE POLARISÉE AVEC UN PROLONGATEUR, UNE PRISE DE COURANT OU UNE AUTRE SORTIE DE COURANT, SAUF SI LES LAMES PEUVENT ÊTRE INSÉRÉS À FOND SANS EN LAISSER AUCUNE PARTIE À DÉCOUVERT.

Avoid displaying stationary images on your TV screen for extended periods of time. Stationary patterns generated by computer displays, video games, stock market reports, etc. can become permanently engrained on the picture tube. This damage is not protected by your warranty as it is the result of misuse. Should you wish to use your TOSHIBA Television to display still images, it is always advisable to reduce brightness and contrast settings. Never leave a computer or video game display unattended.

Note to CATV system installer in the USA:
This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Table of Contents

Set Up

Introduction 4
Exploring your new TV 4
Installing Your TV 4
Connecting Your TV 5
Connecting a VCR 5
Connecting a cable converter box 5
Connecting a cable converter box and a VCR 6
Connecting a satellite receiver and a VCR 6
Connecting a DVD with component video and VCR 7
Connecting two VCRs 7

Preparation

Preparing the Remote Control for Use 8
Installing the Remote Control batteries 8
Location of Controls 9
Using the Remote with VCR or Cable TV Converter 10
Programming the Remote Control 11
Controlling other brands of VCR's and cable TV converters 11
Menu function (General Instructions) 14
First-Time Operation 15
Turning the TV set on 15
Selecting the on-screen display language 15
Programming Channel Memory 16
TV/CABLE function 16
CH PROGRAM function 16
ADD/ERASE function 17

Basic Operation

Watching TV Programs or Video Input 18
Selecting the TV channels 18
Selecting the video input source 18
Convenient Remote Functions 19
Displaying on-screen information 19
Muting the Sound 19
Changing quickly between two channels 19
Adjusting the Picture 20
Adjusting the picture quality 20
Selecting the color temperature 21
Selecting the picture preference function 21
Adjusting the Sound 22
Adjusting the sound quality 22
Using the Timer (Sleep Timer) 23
Setting the timer 23
Selecting Stereo/SAP Broadcasts 24
Listening to stereo sound 24
Activating the surround sound effect 24
Listening to second language 25

Advanced Operation

Programming Your Favorite Channels 26
Programming your favorite channels 26
Selecting your favorite channels 26
Operating Closed Caption Feature 27
Viewing captions or text 27
Using V-CHIP Control 28
Selecting the V-CHIP CONTROL menu 28
Adjusting the V-CHIP CONTROL menu 29
Unblocking programs temporarily 31
BLOCK CHANNEL function 31

Reference Section

Cleaning and Care 32
Specifications 33
Before Calling Service Personnel 34
Limited United States Warranty 35

Introduction

This manual applies to models 27A40, 32A40 and 36A40, and there are slight differences among them.
Check the model of your TV before using this manual.
The 32A40 is the model used for illustration purposes. Illustrations in this manual are based on using the Remote Control.

Exploring your new TV

You can operate your TV using the buttons on the front panel or the Remote Control.
The back panel provides all the terminal connections you will need to connect other equipment to your TV.

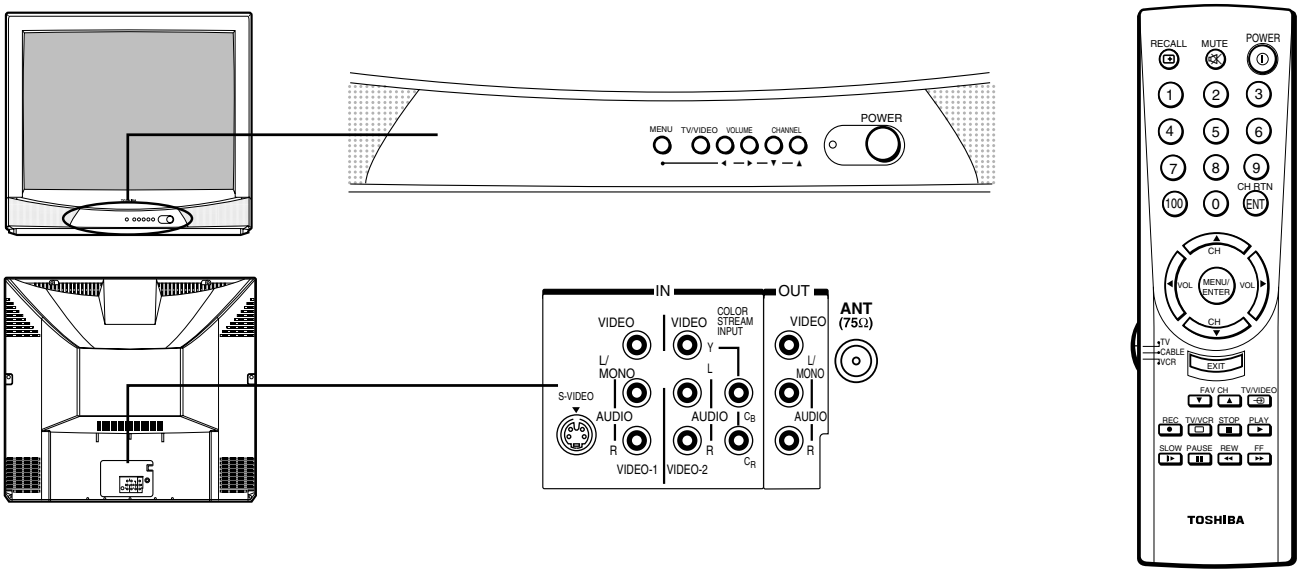

Installing Your TV

Where to install

Place the TV on the floor or on a sturdy platform. The mounting surface should be flat and steady.

Lighting

Do not place the TV in a room where direct lighting strikes the screen. Use soft and indirect lighting.

Air circulation

Place the TV far enough from the walls to allow proper ventilation. This will prevent the TV from overheating and avoid possible damage to the TV. Avoid dusty places too.

Power supply

Plug into an electrical outlet with standard household power (120 volt AC, 60Hz). Do not change the plug's safety prong. See the right column.

WARNING : TO AVOID PERSONAL INJURY

- Do not stand or climb on the TV.
- Do not put a VCR or any heavy object on top of the TV.

CAUTION :

As a safety feature, the plug has one prong wider than the other. It will fit only one way into a standard electrical outlet. If the plug will not fit into the outlet, try turning it around. If the plug will not fit either way, the outlet is probably old and non-standard.
You will need to have a new outlet installed by an electrician.
DO NOT CHANGE THE SAFETY FEATURE OF THE PLUG.

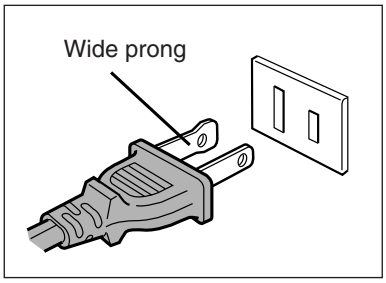

Connecting Your TV

If you haven't connected electronic equipment before, or you have been frustrated in the past, you may wish to read this section. (Cables are not supplied.)

- A coaxial cable is the standard cable that comes in from your antenna or cable converter box. Coaxial cables use "F" connectors.
- Audio and video cables are usually color coded according to use: yellow for video and red and white for audio. The red audio cable is for the stereo right channel, and the white audio cable is for the stereo (or mono) left channel. If you look at the rear panel of the TV, you will see that the terminals are color coded in the same manner as the cables.
- S-video cables provide better picture performance. S-video cables can only be used with S-video compatible components.
- ColorStream™ cables come in sets of three and provide the best picture performance. ColorStream cables can only be used with ColorStream compatible components.

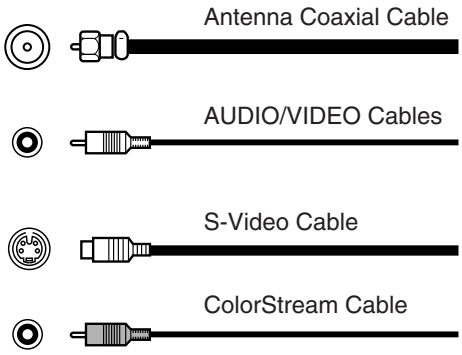

Caution:
Do not plug the TV in until you have finished connecting all of your equipment.

Connecting a VCR

This connection allows you to watch local channels and video programs, play or record on the VCR while watching TV, and to record from one channel while watching another channel.

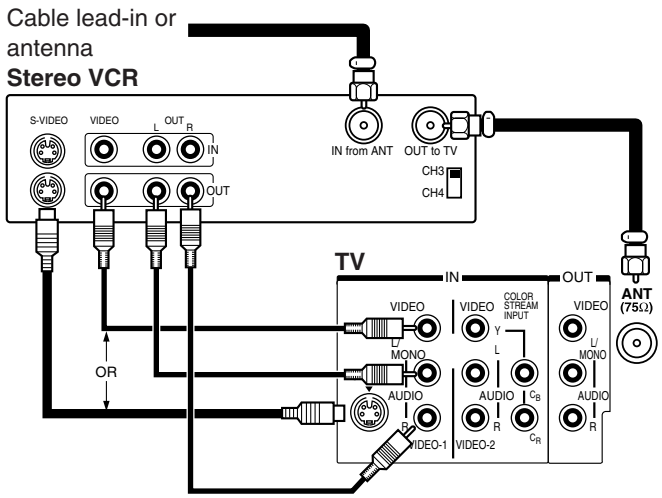

Caution:
If using a mono VCR, connect L/Mono to VCR Audio OUT using only one audio cable.
If you have a S-VHS VCR, use the S-video connections and remove the video cable.
Do not connect the video cable and the S-video cable to VIDEO 1 simultaneously.

Note:
The VIDEO 2 jacks can also be used for connecting a second piece of video equipment, such as a video disc player or camcorder etc. with audio/video outputs.

Connecting a cable converter box

This connection allows you to watch cable and premium channels. Tune the TV to channel 3 or 4 (whichever channel is vacant in your broadcast area), then use the converter box to change channels.

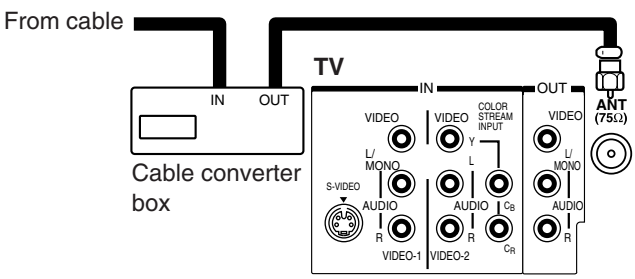

Note:
When you use a converter box with your TV, there may be features that you cannnot program using the Remote Control, such as blocking channels, and programming your favorite channels.

Connecting Your TV (continued)

Connecting a cable converter box and a VCR

This connection allows you to watch and record basic and premium cable channels, as well as watch video tapes. Tune the TV and VCR channels to 3 or 4 (whichever channel is vacant in your broadcast area), then use the converter box to change channels.

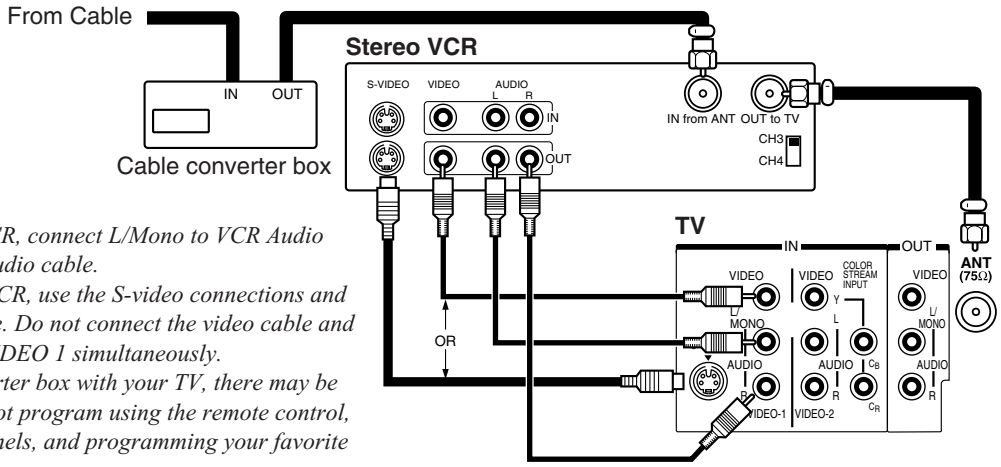

Caution:

- *If you have a mono VCR, connect L/Mono to VCR Audio OUT using only one audio cable.*
  If you have a S-VHS VCR, use the S-video connections and remove the video cable. Do not connect the video cable and the S-video cable to VIDEO 1 simultaneously.
- *When you use a converter box with your TV, there may be features that you cannot program using the remote control, such as blocking channels, and programming your favorite channels.*

Connecting a satellite receiver and a VCR

This connection allows you to watch satellite, video and TV programs.
You can record one TV channel while watching another channel.

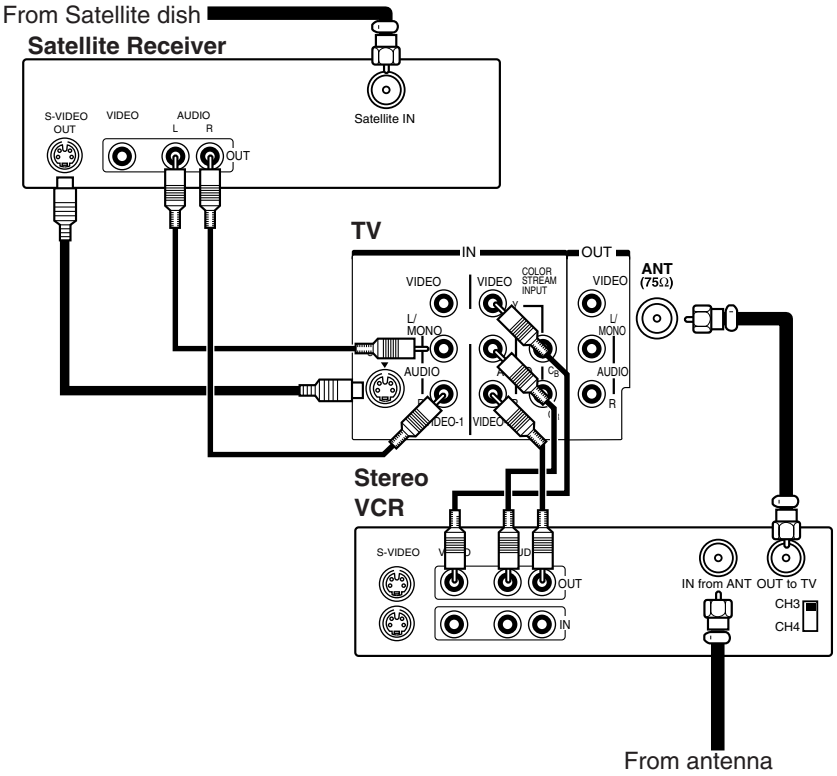

Caution:

- *You can use a video cable instead of the S-video cable, but the picture quality will decrease.*
  Do not connect the video cable and the S-video cable to VIDEO 1 simultaneously.

Notes:

- *To watch from the Satellite Receiver, the TV must select VIDEO 1.*
- *To watch from the VCR, the TV must select VIDEO 2.*

Connecting a DVD with component video and VCR

This connection allows you to watch DVD, video or TV programs and to record TV programs. Your TV is capable of using ColorStream (component video). Connecting your TV to a ColorStream compatible DVD can greatly enhance picture quality and performance.

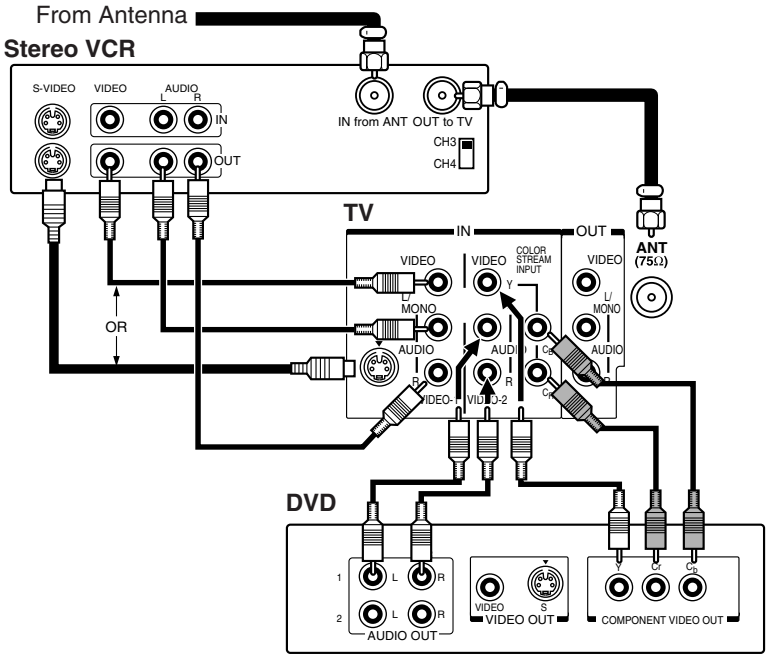

Caution:
The unauthorized recording of television programs, video tapes and other materials may infringe upon the provisions of copyright laws.

Notes:
- *To watch from the VCR, the TV must select VIDEO 1.*
- *To watch from DVD, the TV must select VIDEO 2.*

Connecting two VCRs

This connection allows you to record (dub/edit) from one VCR to another VCR while watching a video program. You will also be able to record from one TV channel while watching another channel.

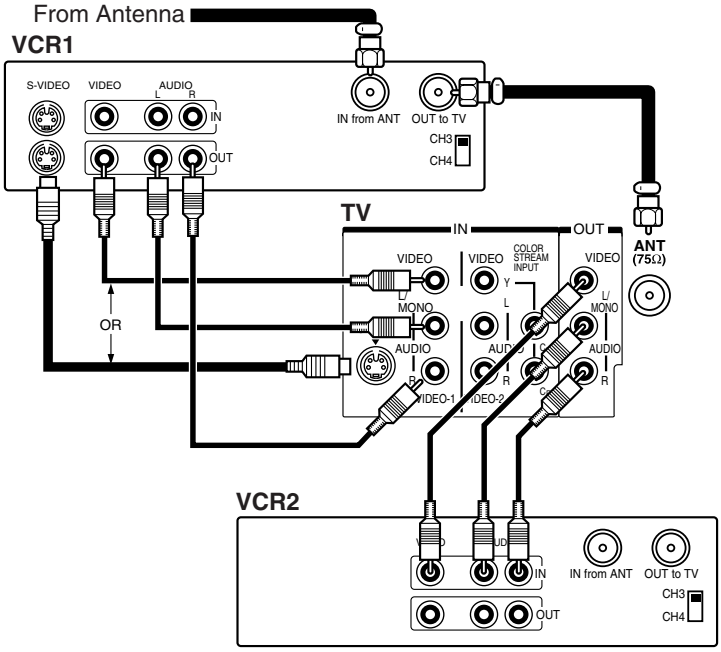

Caution:
The unauthorized recording of television programs, video tapes and other materials may infringe upon the provisions of copyright laws.

Note:
The TV must select Video 1 to dub or edit from VCR 1 to VCR 2. VCR 2 must select Line In when editing or dubbing from VCR 1.

Preparing the Remote Control for Use

With the Remote Control, you can operate your TV, most VCR models, and cable TV converters together, even if they are different brands. If you will be using your TV with a Toshiba VCR, your Remote Control is already programmed and ready to use. If you own different brands of VCR's and/or converters, you first have to program your Remote Control.
(See “Programming the Remote Control” on page 11.)

Installing the Remote Control batteries

1 Slide the battery cover off of the back of the Remote Control.

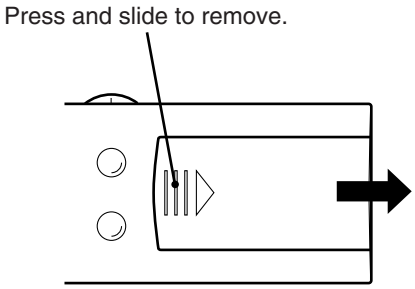

Caution:

- *Dispose of your batteries in a designated disposal area. Do not throw your batteries into a fire.*
- *Do not mix battery types or combine used batteries with new ones.*
- *Remove dead batteries immediately to prevent battery acid from leaking into the battery compartment.*
- *If you do not intend to use the remote control for a long time, remove the batteries.*

2 Install two “AA” size batteries. Match the + and – signs on the batteries to the signs on the battery compartment.

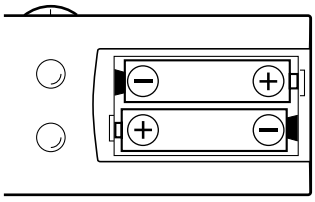

Note:

This Remote Control’s functions may or may not operate your VCR or cable TV converter. Refer to the owner’s manuals supplied with the equipment to see which features are available. In addition, the original controllers may have features not available on this Remote Control. If you would like to continue to use these features, you may want to use the original remote control.

3 Slide the battery cover back on to the Remote Control until the lock snaps.

Location of Controls

For details on the use of each control, refer to pages in brackets.

TV front panel (represents 32A40)

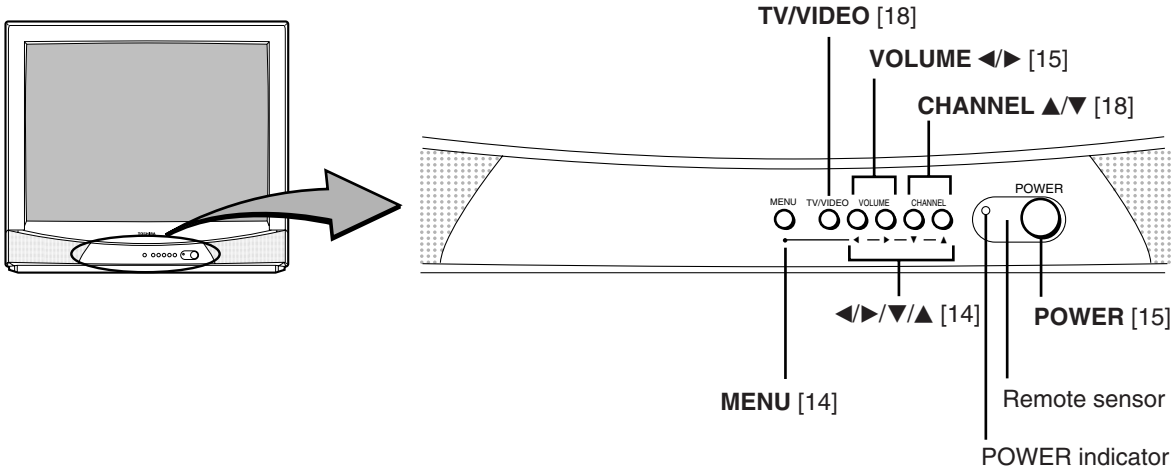

Remote Control

Only the buttons that are used to operate the TV set are described here.

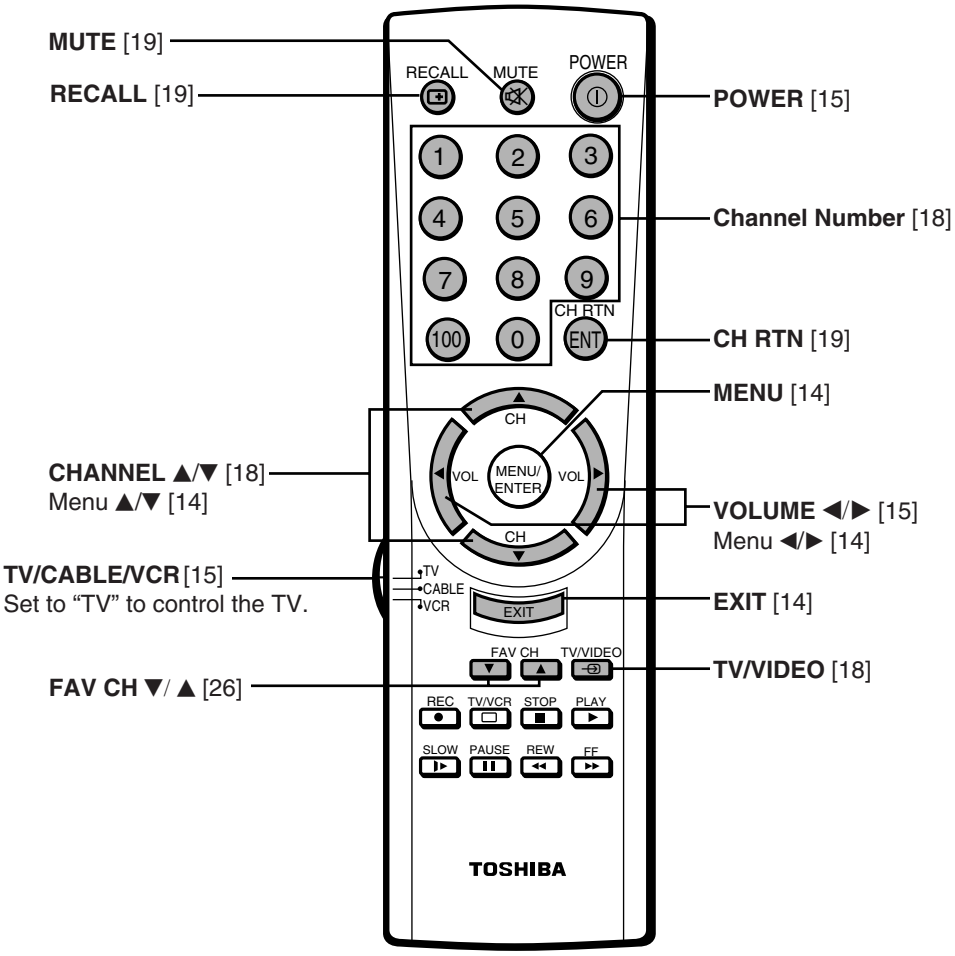

Using the Remote with VCR or Cable TV Converter

- To control a TOSHIBA VCR, first set the **TV/CABLE/VCR** switch to "VCR" position. The buttons shown below will then control the VCR. The rest of the buttons operate the TV as usual.
  If you have another brand of VCR, you can probably program your Remote to control it.
  Details are on page 11.
- To control a cable TV converter, this Remote Control must be programmed to recognize the brand of your converter. See page 11.
  The shaded buttons can be used to control the cable TV converter.
  Set the **TV/CABLE/VCR** switch to "CABLE" position whenever you control the cable TV converter.

Aim at the VCR or cable TV converter

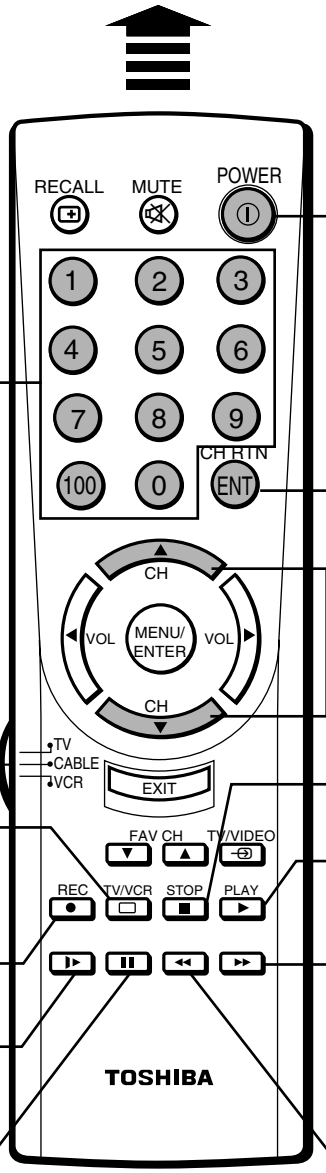

Channel Number
Press the numbers desired for direct access.

TV/CABLE/VCR
"CABLE": To control the cable box
"VCR": To control the VCR

TV/VCR
Press to select the TV mode to view one program while recording another program.

REC (record)
Press to start recording.

SLOW
Press to view a slow-motion picture in playback mode.

PAUSE
Press to freeze the picture during playback or recording.
Press again to release.

POWER
Press the button to turn the VCR (or converter) on.
Press again to turn off.

ENTER
Some VCR's and Cable TV converters require "ENT" to change channel number.

CHANNEL ▲ / ▼
Press ▲ to select next higher channel.
Press ▼ to select next lower channel.

STOP
Press to stop the tape.

PLAY
Press to begin tape playback.

FF (fast forward)
Press to rapidly advance the tape.
In playback mode, press to view the picture moving rapidly in forward direction.

REW (rewind)
Press to rewind the tape.
In playback mode, press to view picture moving rapidly in reverse.

Programming the Remote Control

- This Remote Control is preprogrammed to operate TOSHIBA VCR's.
- To use VCR's other than TOSHIBA models (or cable converter), perform the following procedures before operating.

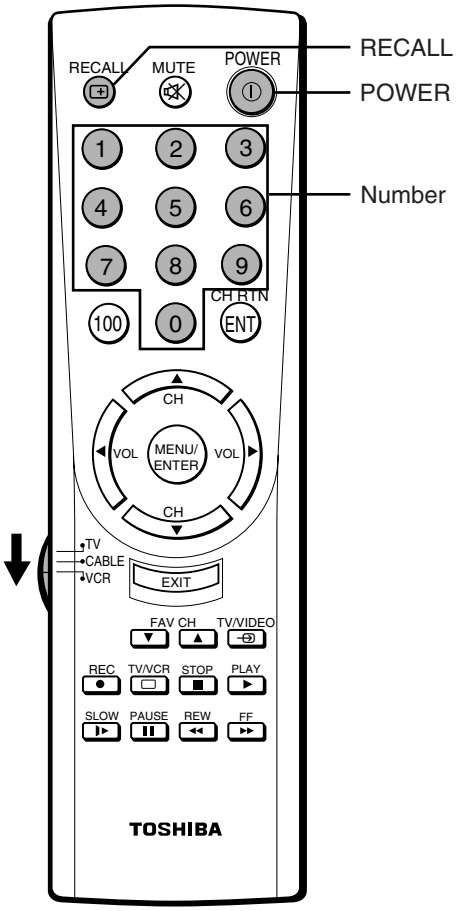

Controlling other brands of VCR's and cable TV converters

1 Refer to the "***VCR code table***" (or "***Cable TV converter code table***") on pages 12 and 13 to find the code number that corresponds to the brand name of your VCR (or converter).

If more than one number is listed, try each one separately until you find the one that works.

2 Set the **TV/CABLE/VCR** switch to "VCR" (or "CABLE").

3 Hold down **RECALL** while pressing the **Number** buttons for the three digit code number for your brand of VCR (or converter).

4 Point the Remote Control at the VCR (or at the converter) and press **POWER** to test the code number.

– **If the right number was entered**, the VCR (or the converter) should turn off.

– **If the VCR (or the converter) does not respond to the Remote Control,** repeat steps 1 to 4 with another code number.

For future reference, write down the code numbers you used:

VCR CODE _____

CABLE CODE _____

Notes:

- *You have to reprogram the Remote Control when you change its batteries.*
- *Some newer VCR's are capable of working on either of two remote codes. These VCR's have a switch labeled "VCR1/VCR2".*
  If your VCR has this kind of switch, and does not respond to all the code numbers for your VCR brand name, set the switch to another position ("VCR1" or "VCR2") and reprogram the Remote Control.

Programming the Remote Control (Continued)

- In some rare cases, you may not be able to operate your non-Toshiba equipment with the supplied Remote Control. This is because your equipment may use a code that is not provided with this Remote Control. In this case, please use the equipment's own remote control.

VCR code table

BRAND NAME	CODE NUMBER
Adventura	019
Aiko	297
Aiwa	019
Akai	060,068,080,125, 261
American High	054
Asha	259
Audiovox	056
Beaumark	259
Bell & Howell	123
Brandt	206
Broksonic	140,203,230,314, 380
Calix	056
Canon	054
Capehart	039
Carver	100
CCE	091,297
Citizen	056,297
Colt	091
Craig	056,066,091,259
Curtis Mathes	054,060,079
Cybernex	259
Daewoo	039,064,297
Daytron	039
Dynatech	019
Electrohome	056
Electrophonic	056
Emerex	051
Emerson	019,021,056,062, 080,087,140,203, 227,228,230,231, 297,313,314,380, 498
Fisher	066,073,085,123
Fuji	052,054
Funai	019,344
Garrard	019,344
GE	054,079,084,221
Goldstar	037,056,057
Gradiente	019
Harley Davidson	019
Harman/Kardon	057,094
Harwood	087,091
Headquarter	065
HI-Q	066
Hitachi	060,061,084,124, 185, 254
Jensen	060
JVC	027,060,086
Kenwood	057,060,086
KLH	091
Kodak	054,056
Lloyd	019
Lloyd's	227
Logik	091
LXI	056
Magnavox	054,058,100,129,168
Magnin	259
Marantz	054,100
Marta	056
Matsushita	054
MEI	054
Memorex	019,054,056,058, 065,066,067,123, 259
MGA	062,080
MGN Technology	259
Minolta	061,124
Mitsubishi	062,080,086,094 192,233,261
Motorola	054,067
MTC	019,259
Multitech	019,091
NAD	077
NEC	057,059,060,069,086
Nikko	056
Noblex	259
Olympus	054
Optimus	056,067,077,123
Optonica	081
Orion	498
Panasonic	054,096,181,244,473
Penney	054,056,057,059, 061,073,259
Pentax	061,084,124
Philco	054
Philips	054,081,100,129
Pilot	056
Pioneer	077,086
Portland	039
Protec	091
Pulsar	058
Quarter	065
Quarts	065
Quasar	054,096
Radio Shack	019,056,344
Radix	056
Randex	056
RCA	061,079,084,096, 124,125,168,221
Realistic	019,054,056,065, 066,067,081,085, 123,259
Ricoh	053
Runco	058
Samsung	064,259
Sanky	058,067
Sansui	060,086
Sanyo	065,066,123,259
Scott	062,064,140,203, 229,230,231
Sears	054,056,061,065, 066,073,085,123, 124
Sharp	067,081
Shintom	091
Shogun	259
Singer	091
Sony	051,052,053,054
STS	061
Sylvania	019,054,062,100, 129
Symphonic	019,344
Tatung	060
Teac	019,060
Technics	054,181
Teknika	019,054,056,071
Telefunken	206
TMK	227,259
Toshiba	062,064,085,229, 231,385
Totevision	056,259
Unitech	259
Vector	064
Vector Research	057,059
Video Concepts	059,064,080
Videosonic	259
Wards	019,054,061,066, 067,081,091,168, 231,259
XR-1000	019,054,091
Yamaha	057
Zenith	052,053,058

Cable TV converter code table

BRAND NAME	CODE NUMBER
ABC	020,022,026,027, 030,032,033,036, 066
Antronix	041
Archer	041,058,172
Belcor	075
Cable Star	075
Cabletenna	041
Cableview	041
Century	172
Citizen	172
Colour Voice	044,050
Comtronics	059,079
Contec	038
Dae Ryung	027
Eastern	021
Focus	419
Garrard	172
GC Electronics	075
Gemini	034,089
General Instrument	030,295
Goldstar	059,163
Hamlin	028,039,053,278, 292
Hitachi	030
Hytex	026
Jasco	172
Jerrold	022,030,031,033 034,066,295
Macom	052
Magnavox	046
Memorex	019
Movie Time	175
NSC	089,175
Oak	026,038,267
Panasonic	019,040,126
Paragon	019
Philips	044,046,047,048 049,050,172
Pioneer	042,163,552
Popular Mechanics	419
Pulsar	019
RCA	040
Recoton	419
Regal	039,278,292
Regency	021
Rembrandt	030,089
Runco	019
Samsung	059,163
Scientific Atlanta	025,027,036,296
Signal	034,059
Signature	030
SL Marx	059
Sprucer	040
Standard Components	174
Starcom	022,034,066
Stargate	034,059
Starquest	034
Sylvania	020
Teleview	059
Texscan	020
Tocom	031,032,078
Toshiba	019
Tusa	034
Unika	041,172
United Artists	026
United Cable	022
Universal	041,058,075,172
Viewstar	046,079,230
Zenith	019
Zentek	419

Menu Function (General Instructions)

We suggest you familiarize yourself with this procedure before using the Menu function.
To adjust any TV feature, the use of the Menu function is required. The adjustments that can be made to the TV appear on the screen.

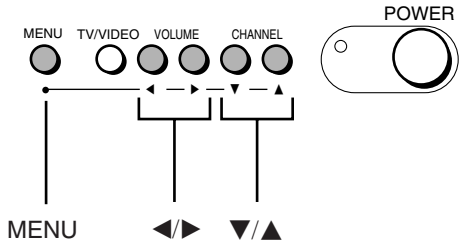

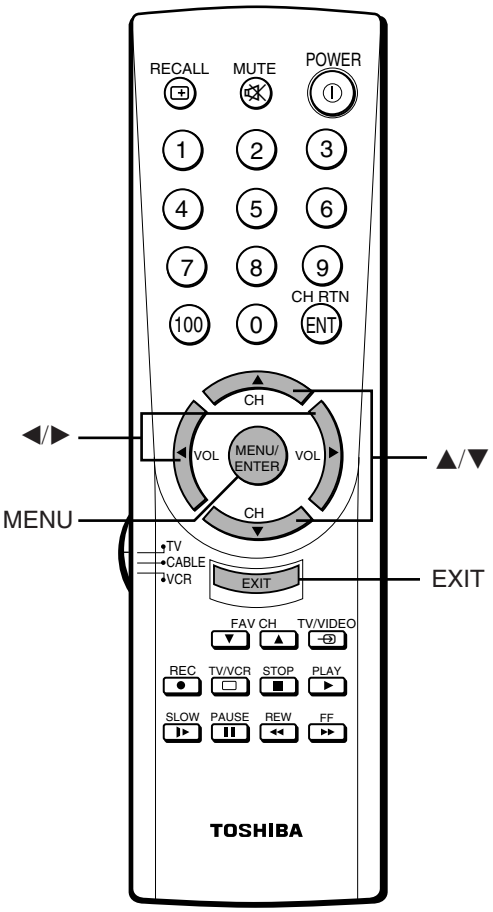

Notes:

- *The ◄/► buttons will function as the **VOLUME** ◄/► buttons when no menu display is on the screen.*
- *The ▲/▼ buttons will function as the **CHANNEL** ▲/▼ buttons when no menu display is on the screen.*

MENU button (on TV and on Remote)

Each time you press **MENU**, the Picture 1, Picture 2, Audio, Setup or Option menu on-screen display is selected in order, then press ▼ or ▲.

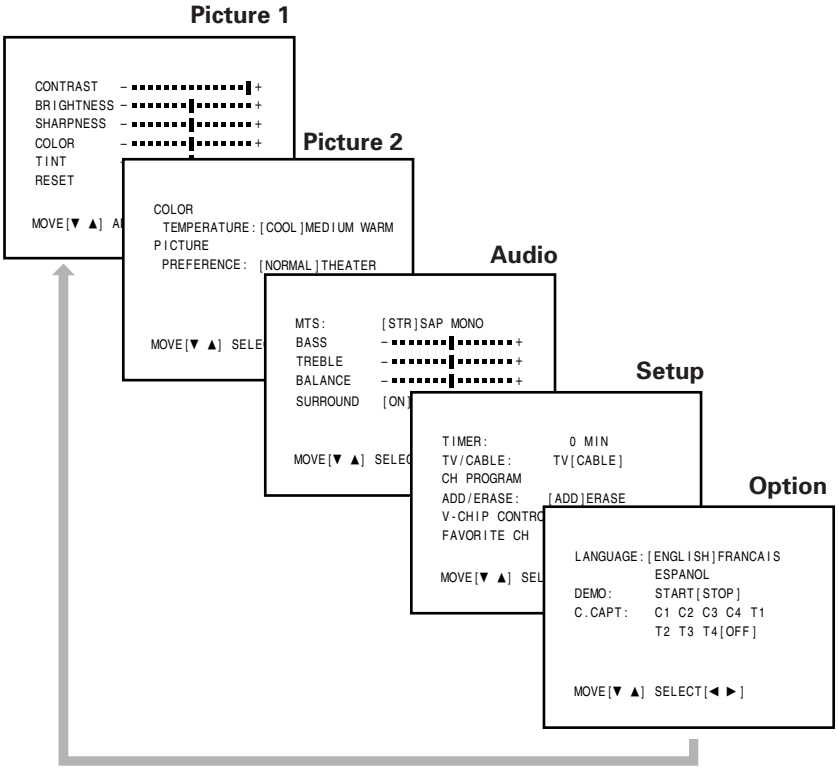

▼/▲ buttons (on TV and on Remote)

Use ▼ or ▲ after you have selected the on-screen menu you want to adjust with the **MENU** button.
Each time you press ▼ or ▲, the function to be adjusted will be selected in order.

▼button ..... from top to bottom
▲button ..... from bottom to top

The selected function will be displayed in purple.

◄/► buttons (on TV and on Remote)

Use ◄ or ► to adjust the function you have selected with the ▼/▲ buttons.

EXIT button (on Remote)

The above five menu displays will automatically disappear from the screen if no control has been operated for about 15 seconds.
If you want to clear the screen of all on-screen menus instantly, press **EXIT**.

First-Time Operation

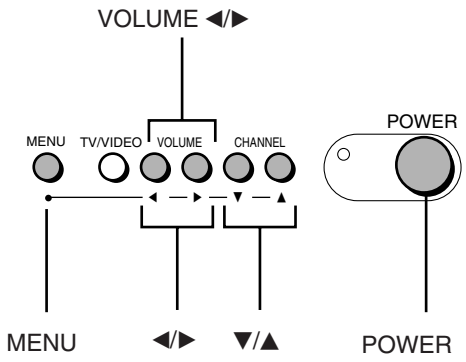

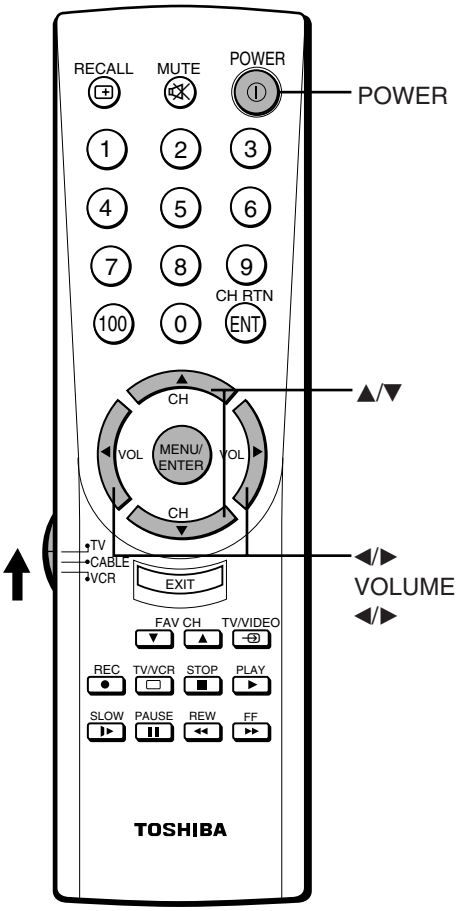

Turning the TV set on

1 Set the **TV/CABLE/VCR** switch on the Remote Control to "TV" position.

2 Press **POWER** to turn on the TV.

To turn off the TV, press **POWER** again.

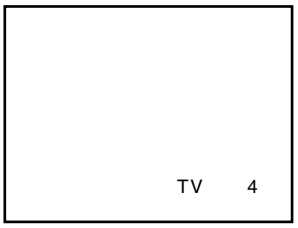

3 Press **VOLUME ◄/►** to adjust the volume.
To increase the volume, press ►.
To decrease the volume, press ◄.

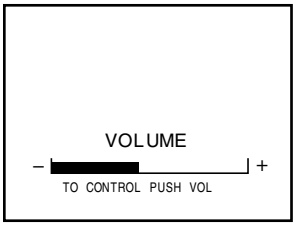

Selecting the on-screen display language

1 Press **MENU** until the Option menu is displayed on the screen.

2 Press ▲ or ▼ repeatedly until "LANGUAGE" is displayed in purple.

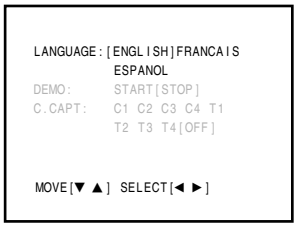

3 Press ◄ or ► until your desired language is displayed in purple.
If you select "FRANCAIS" for example, the display language changes to French.

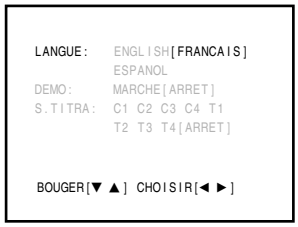

Understanding Auto-Power-Off feature

If a vacant channel is tuned or TV broadcast for a day is finished, the TV will automatically turn off after about 15 minutes.
This feature does not operate in the VIDEO mode.

Understanding Last Mode Memory feature

If the power is cut off while you are viewing the TV and the power is resupplied, the TV is turned on automatically by the ***Last Mode Memory*** feature. If the power is going to be off or when you leave home for a long time, remove the power plug from the wall outlet to prevent the TV from turning on in your absence.

Programming Channel Memory

The channel memory is the list of TV channel numbers your TV will stop on when you press the **CHANNEL ▲** or **▼** button.
First, use the TV/CABLE and CH PROGRAM functions to preset all active channels in your area.
If necessary, arrange the preset channels with the ADD/ERASE functions so that you can tune into only desired channels.

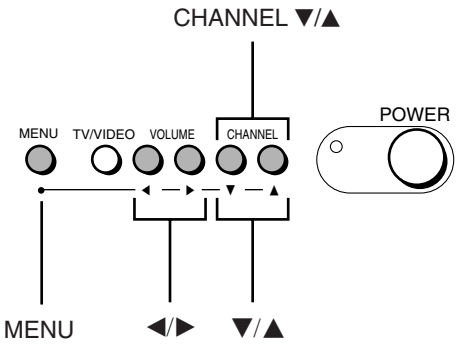

TV/CABLE function

1 Press **MENU** until the Setup menu is displayed on the screen.

2 Press ▲ or ▼ until "TV/CABLE" is displayed in purple.

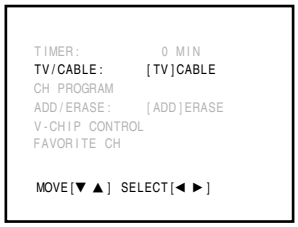

3 Press ◄ or ► until the mode that corresponds to your TV signal system is displayed in purple.
TV: TV broadcast signals.
(VHF channels 2 through 13 and UHF channels 14 through 69)
CABLE: Cable TV signals.
(Cable channels 1 through 125)

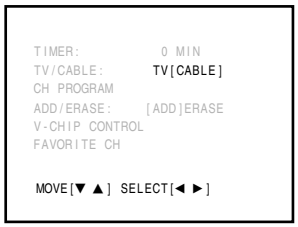

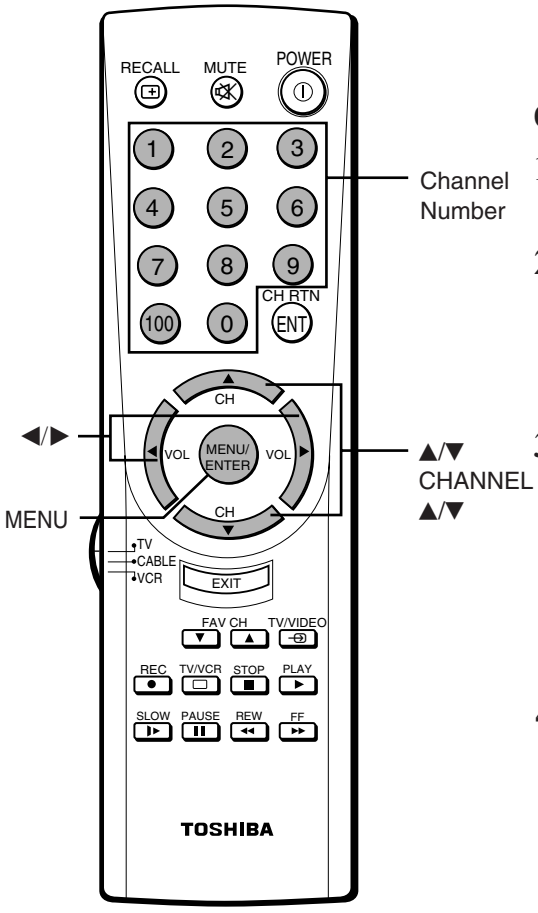

CH PROGRAM function

1 Press **MENU** until the Setup menu is displayed on the screen.

2 Press ▲ or ▼ repeatedly until "CH PROGRAM" is displayed in purple.

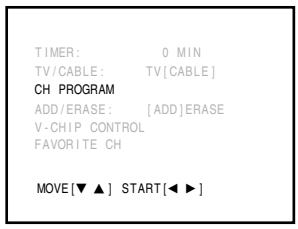

3 Press ◄ or ► to start channel programming. The TV will automatically cycle through all the TV or CABLE channels depending on the mode selected, and store active channels in the channel memory.

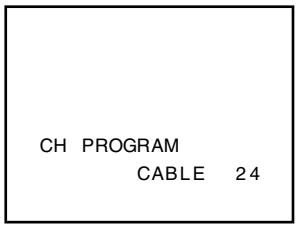

4 When channel programming is complete, you will see the message at the right.

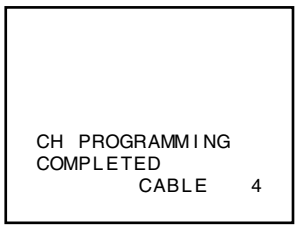

5 Press **CHANNEL ▲** or **▼** to make sure the channel programming has been done properly.

ADD/ERASE function

After performing the CH PROGRAM function, you can add or erase specific channels.

1 Select the channel you want to erase using the **CHANNEL ▲** or **▼** button, or select the channel you want to add using the **Channel Number** buttons.

2 Press **MENU** repeatedly until the Setup menu is displayed on the screen.

3 Press ▲ or ▼ repeatedly until "ADD/ ERASE" is displayed in purple.

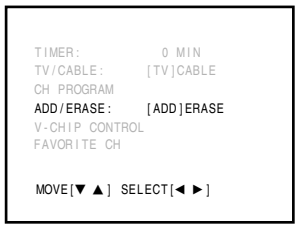

4 Press ◄ or ► :

To erase the channel

Press the button until "ERASE" is displayed in purple indicating that the channel has been erased from the memory.

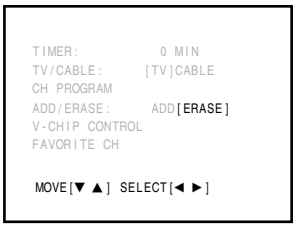

To add the channel

Press the button until "ADD" is displayed in purple indicating that the channel has been memorized.

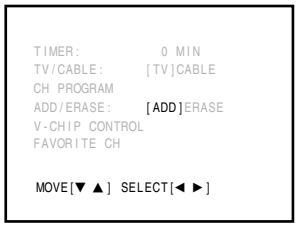

5 Repeat steps 1 to 4 for other channels.

You have now completed the channel programming.

CABLE channel reference chart

Number on this TV	Corresponding CABLE channel	Number on this TV	Corresponding CABLE channel
1	A-8	67	67
5	5(A-7)	68	68
6	6(A-6)	69	69
14	A	⋮	⋮
15	B	92	92
16	C	93	93
⋮	⋮	94	94
34	U	95	A-5
35	V	96	A-4
36	W	97	A-3
37	AA	98	A-2
38	BB	99	A-1
⋮	⋮	100	100
60	XX	101	101
61	YY	102	102
62	ZZ	⋮	⋮
63	AAA	123	123
64	BBB	124	124
65	65	125	125
66	66		

The above chart is typical of many cable system channel allocations. If in doubt, consult your cable company.

Watching TV Programs or Video input

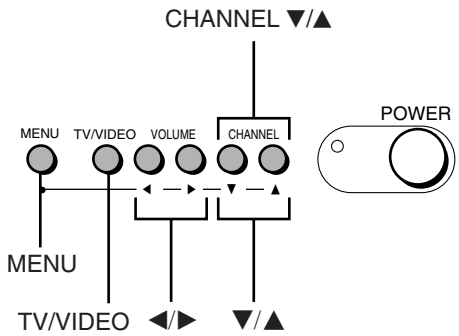

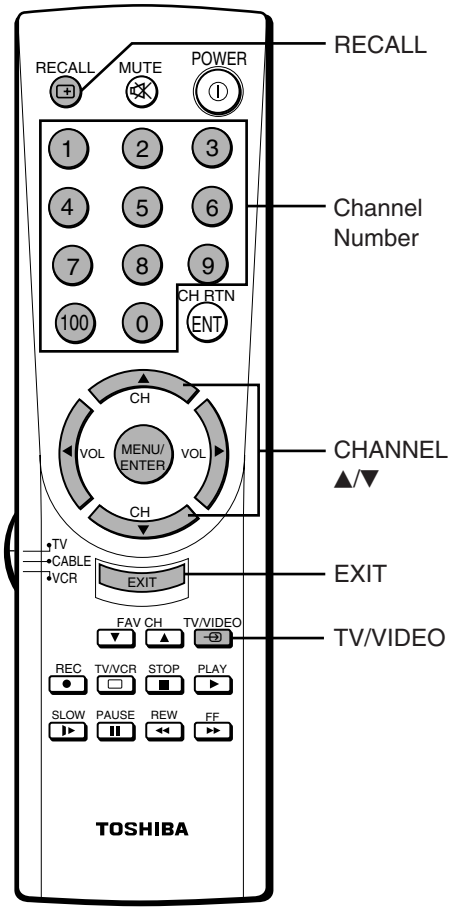

Selecting the TV channels

Select a channel in one of the following two ways.

- **To scan the memorized channels in numerical sequence**
  Press **CHANNEL ▲** to select the next higher channel.
  Press **CHANNEL ▼** to select the next lower channel.
  Press the button again to select the next memorized channels.

- **To select a channel directly**
  Press the **Channel Number** buttons (0-9 and 100).
  To select channel 4, press “4” (or press “0”, “4”).
  To select channel 38, press “3”, “8”.
  To select channel 125, press “100”, “2”, “5” in sequence.

If you cannot select certain channels, either TV (off the air) or CABLE channels
Check if the TV/CABLE function is properly set. See page 16.

Selecting the video input source

You can use the **TV/VIDEO** button to view signal coming from other devices, such as VCR's or video disc players that may be connected to your TV. (See “Connecting Your TV” on page 5.)

Note: *To operate your TV and video equipment properly, refer to the instructions furnished with the video equipment.*

1 Turn the TV and the video equipment ON.

2 Press **TV/VIDEO** on the Remote Control or on the TV to select “VIDEO 1” or “VIDEO 2”.
The selected source will be displayed in purple.

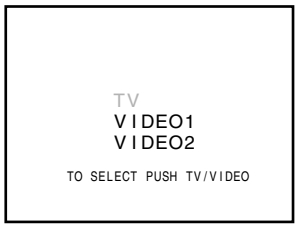

3 Operate the video equipment normally.

About the Demonstration Mode

When this function is activated, your TV will automatically display a variety of its on-screen menus and special features. This function is provided for demonstration purposes only.

1 Press **MENU**, then ▲ or ▼ until “DEMO” in the Option menu is displayed in purple.

2 Press ◄ or ► to select “START”.

The on-screen demonstration will start after about 15 seconds.

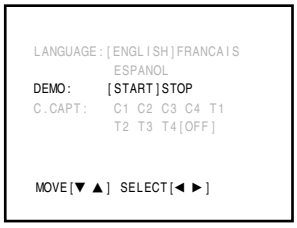

To stop the demonstration
Press **EXIT** or **RECALL** on the Remote or select “STOP” in the menu.